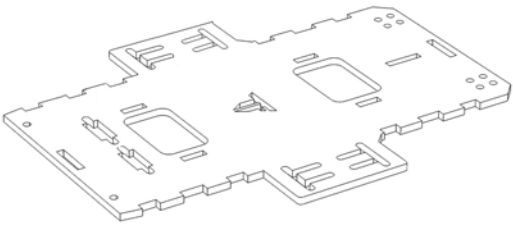 
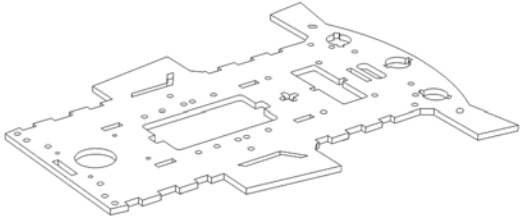 

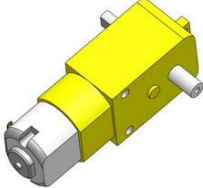 
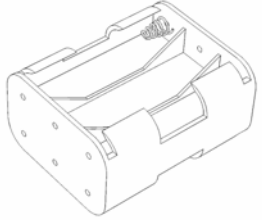 
 
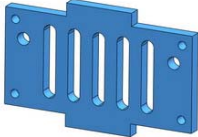 
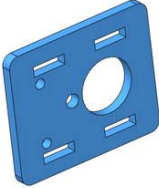 

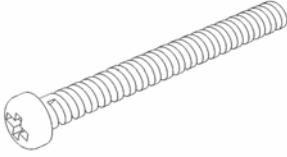 



TF-4WD Chassis assembly manual


Thank you for choosing the “TF-4WD” Chassis. The following explanation will help you install the product. Let's do it together!

Parts List


	Bottom board 1PCS		Top board 1PCS
	Wheel 4 PCS		TT Motor 4 PCS
			6AA Battery holder 1PCS
	Parts ① 4PCS		Parts ② 2PCS
			Parts ③ 4PCS
	Fixtures ① 1PCS		M3×35 Screw 8PCS
			M3 Nut 8PCS

Assembly process


Step1: Prior to assembly , Welding wires for the TT motors. (With a red dot is the positive of the TT motor.)

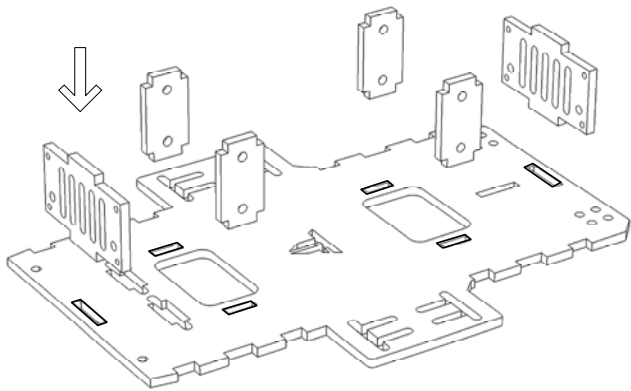

 Step2: Insert Parts ① and Parts ② to the Bottom Board.

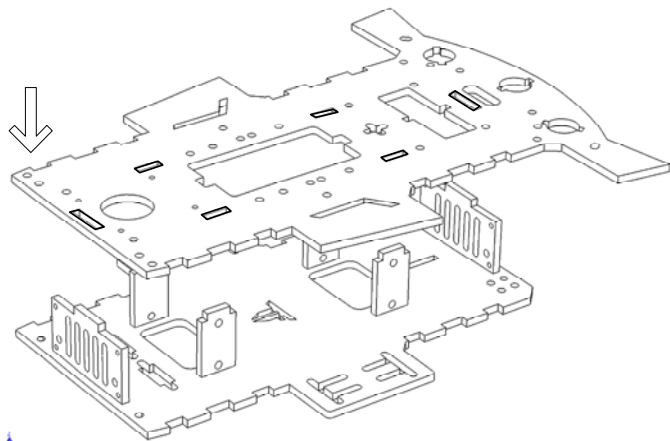


Step3: Fixed the Top board to the Parts ① ②

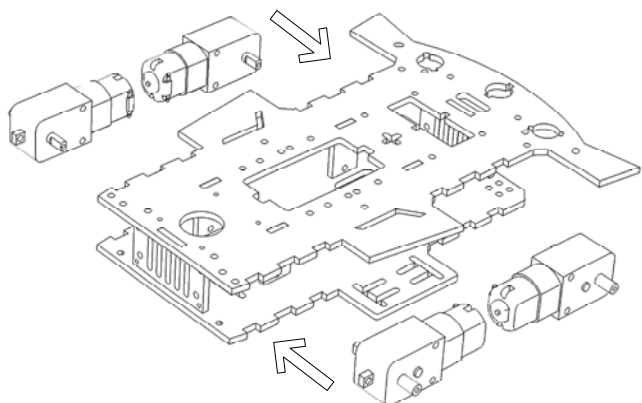


Step4: Put the TT motor to the the Parts ①

Notes. convex dot of motor facing out.

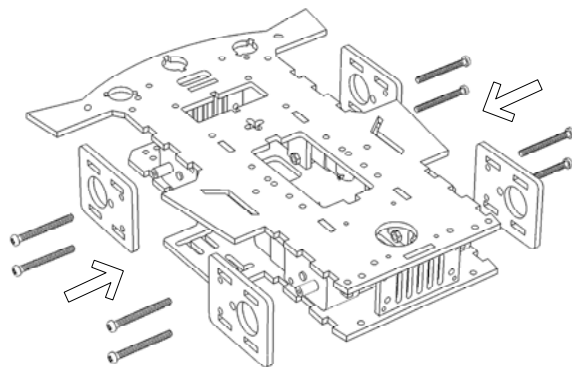

Step5: Assembly the Parts ③ to the TT motor,

Screw with the M3×35 Screw

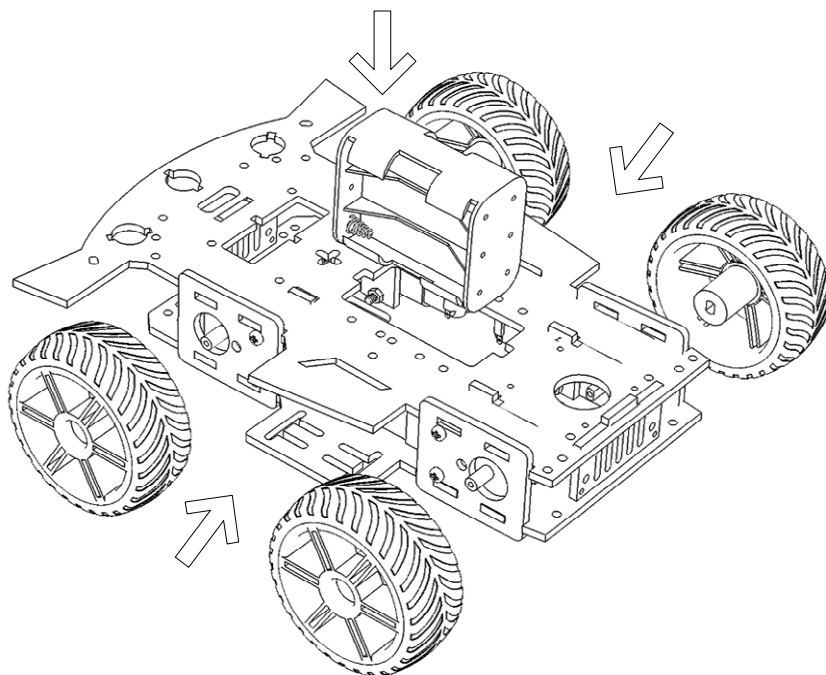

Step6: Assembly Wheel and battery holder to the TF-4WD CHassis.

Finished as below!